




RESERVED TO THE CONSTRUCTOR TECHNICAL PROGRAMMING

ACCESS TO PROGRAMMING MODE.

Turn the key to 
DO NOT SET IN RUNNING
Simultaneously press (5") to select
TECHNICAL PROGRAMMING


EXIT FROM PROGRAMMING MODE.

Re-position the key to zero 

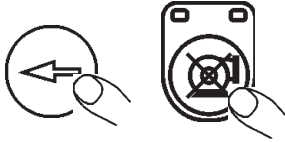

TECHNICAL PROGRAMMING

PRESS TO DISPLAY THE DESIRED PROGRAMMING

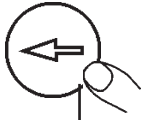


LANGUAGE CHOICE. The language set up in the factory is ITALIAN, the languages that can be selected are: ENGLISH - FRENCH - GERMAN - SPANISH - PORTOGUES.

LANGUAGE CHOICE

ENGLISH

 
Press to select the language.

ENGLISH



Press and wait for PROGRAMMED to be written

BATTERY VOLTAGE

24V
12V

 
Press to select



Factory settings
12V


Press and wait for PROGRAMMED to be written


TACHOMETER ADJUSTMENT

Start with the ignition key and bring the engine to idle at constant known speed for example via a portable tachometer.

Displayed on the display
Example
700 RPM

 
Press until you get the right indication on the display

1500 RPM


Press and wait for PROGRAMMED to be written

FUEL FLOAT CHOICE.

CHOICE OF FUEL FLOAT

FLOAT	TANK LEVEL	OHM
VEGLIA (factory setting)	FULL	0
	EMPTY	300
VDO	FULL	180
	EMPTY	0
DATCON	FULL	37
	EMPTY	240

 
Press to select


VEGLIA

VDO

DATCON

FUEL CONTROL T

VEGLIA


Press and wait for PROGRAMMED to be written

Continued

TECHNICAL PROGRAMMING

MODIFY HOUR METER

HOURS 1 2 3 4 5h

HOURS 1 2 3 4 5h



Press to change hours.



TACHOMETER

FUEL LEVEL INDICATOR

BATTERY VOLTMETER

SWITCHING OFF AND ON PROCEDURE OF INSTRUMENTS (factory setting: engaged) the hour meter is not required

Factory setting: float
VEGLIA

ENGAGED
OFF

EXAMPLE

TACHOMETER



Press to select



Press and wait for
PROGRAMMED
to be written

PREHEATING TIME

PREHEATING TIME. Preheating operation time.

SETTING RANGE	SECONDS	
	FACTORY SETTING	
0 ÷ 60	0	(preheating off)

Time 0s

0s



Press to change the time



Press and wait for
PROGRAMMED
to be written

LOW TIME WATER PRESSURE

PUMP WATER PRESSURE INTERVENTION TIME

SETTING RANGE	SECONDS	
	FACTORY SETTING	
5 ÷ 300	5	

Time 5s

5s



Press and wait for
PROGRAMMED
to be written

CHARGING ALTERNATOR

EXCLUSION THE CHARGING ALTERNATOR In the absence of the alternator, you choose EXCLU.

With the choice EXCLU
out the battery is not
charged.

ENGAGED
OFF

Factory settings

ENGAGED



Press to select



Press and wait for
PROGRAMMED
to be written